

Dear customer, thank you for purchasing our product. Please read the following instructions carefully and follow them to serve you safely and to your full satisfaction. This will prevent misuse or damage. Avoid unprofessional handling of this appliance and always observe the electrical appliance usage guidelines. Keep the instruction manual carefully. For use in the home or indoors. This product should only be used by an adult. Never expose to environments with high humidity (e.g. bathroom), avoid contact of the product with liquids. Avoid proximity or contact with home and computer electronics.

TECHNICAL PARAMETERS

Maximum power – 1200 W
Power supply –220-240V, 50-60Hz
Coverage – IP20
Number of stages – 3


ASSEMBLY

Follow the following instructions for installation.

1. Remove the mounting screws from the bottom of the body frame.
2. Insert the power cord into the hole located in the middle of the base and then mount the body frame to the base.
3. Attach the body frame to the bottom plate using the two mounting screws removed earlier. Push the power cable through the appropriate slots and then secure it with the clamp.

DESCRIPTION OF EQUIPMENT

1. Body frame
2. Base
3. Wing nut (2 pcs)
4. Anti-tip switch safety bar
5. Staples
6. Power cable

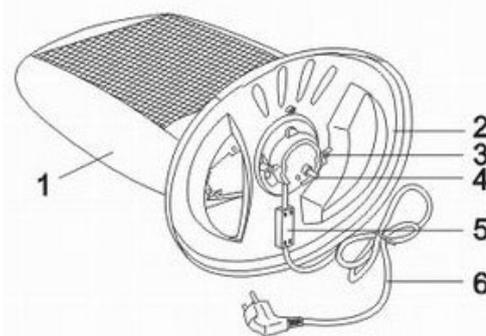

SAFETY MEASURES

This appliance is equipped with a safety device (4) that disconnects the appliance if it is tilted or tipped over by means of a switch located at the bottom of the heater.

OPERATIONS

- 1) Plug the appliance into the socket and switch it on by pressing the main switch 400 W - orange. Press the other 400 W switches to select the heating power - 400 W, 800 W, 1200 W.
- 2) Switches have 2 positions: off = switch is not latched, on = switch is latched
- 3) Press the TURN switch to the On position to turn the rotation on.
- 4) To heat in one direction, turn off the rotation by pressing TURN to the Off position, use the handle to lift the body of the unit and place it in the desired direction.
- 5) To turn the unit off, press the main switch to the Off position and then pull the plug from the socket.

SAFETY NOTICE

When using this electrical appliance, basic safety regulations must always be observed, including the following:

1. Children (but at least 8 years of age) and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge may use the appliance if they are supervised by a responsible person or have been instructed in the safe use of the appliance and understand the dangers involved.
2. If the power cord is damaged, it must be replaced by the manufacturer or by qualified persons to avoid danger.
3. Do not cover the device with anything, as this will cause overheating and a fire hazard.
4. The device must not be placed immediately below the socket.
5. Do not use the device in the immediate vicinity of a bathtub, shower, sink or swimming pool.
6. Do not use the device if:
 - your device has been dropped and is visibly damaged
 - there are visible signs of damage to the device
7. Some parts of this product can be very hot and cause burns.
8. Do not use this device in small rooms if they are occupied by persons who are unable to leave the room on their own, unless constant supervision is provided.
9. To reduce the risk of fire, keep fabrics, curtains, or any other combustible material at least 1 m away from the appliance.

CLEANING AND MAINTENANCE

Before cleaning, switch off the appliance and unplug it from the power outlet.

1. To remove the cover, first remove the 2 cover mounting screws and remove the cover.
2. To remove the grille, first place the grille attachment in a vertical position and pull the grille out.
3. The device can be wiped externally with a damp cloth and a little neutral detergent. Never clean the device with solvents such as gasoline, thinner, etc. Keep the reflector clean.
4. The honeycomb can be cleaned with a small hairbrush or a vacuum cleaner stand.
5. After cleaning, reassemble the unit in reverse order. Make sure that the device has dried well.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.
On request from the manufacturer: info@solight.cz, or download at www.solight.cz

At the end of its useful life, the equipment must be disposed of in an environmentally friendly manner at a designat



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.